

### 5. External control

### LED External RGB controller





Sign	RF	Button	Description
<b>(4)</b>	<b>(b)</b>	ON/OFF	ON/OFF key: Close or open controller (ON or OFF LED lamps)
FALSE	II	PAUSE	Pause: Press this button to rest at current color, press it again, it will continue to change.  Other function: Press in 3 seconds, the buzzer can be on or off.
(MODE)	M+ M-	MODE+ MODE-	Press the keys to select the change modes.  Press MODE+ over 3 seconds to enter cycle mode automatically.  Press MODE- over 3 seconds to enter DIY cycle mode automatically.
Sirteo Sirteo	S+ S-	SPEED+ SPEED-	Press the keys to quicken or slower speed. Press SPEED+ over 3 seconds, all speed change is restored to Default status. Press SPEED- over 3 seconds, the current change is restored to Default status.
* * * * * * * * * * * * * * * * * * *	<b>B+ B-</b>	BRT+ BRT-	Press the keys to increase or decrease brightness. If keep pressing, the brightness will change continually.
	M1 M2 M3 M4	4 DIY keys	Press the keys for 3 seconds, the controller will save the present function mode automatically, which can save 4 modes and save repeately as well.  Press "Mode-" in 3 seconds, the controller will play these 4 DIY modes automatically.

Note: Press "MODE-" key for 3 seconds ,merely play the dynamic effects. If the DIY modes save the static effects, that will be skipped.

DC+: Connect power supply (12V DC+)

+: Connect to lamp + G: Connect to lamp G DC-: Connect power supply (12V DC-)

B: Connect to lamp B R: Connect to lamp R


IP68 R&TTE ( € F© RoHS

Step1: Connect Power supply (12V DC) to one end (DC+, DC-) of LED External RGB controller,

**Step2:** then another end (V+,B,G,R) port of LED External controller connect to 4 wires(V+,B,G,R) of lamp(with housing) as diagram below.

**Remark:** RGB Controller power is 200W, if total lamp wattage is above 180W, need to add Amplifier (150W) to enhance RGB signal.

### Diagram:

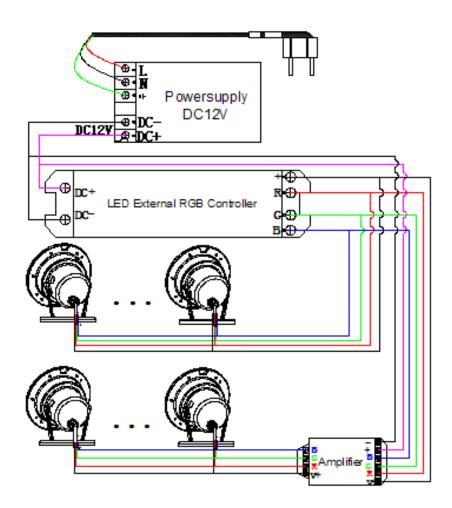


### Without hole LED light Installation method


### 1. Install on the floor

### STEP 1:


Fix the underframe to the concrete by anchors and screws

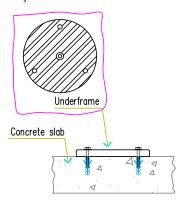

### STEP 2:

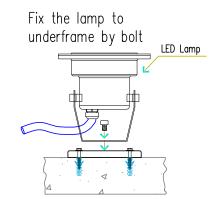


The lamp should be totally under water

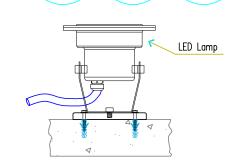


### 2. Fix to the wall

### STEP 1:


Fix the underframe to the concrete by anchors and screws

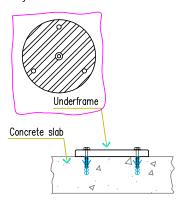

### STEP 2:

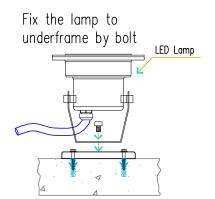

The lamp should be totally under water

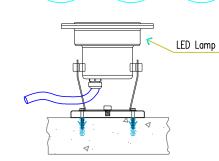


## Without hole LED light Installation method

### 3. Install beside the nozzle


### STEP 1:

Fix the clamp support to the pipe

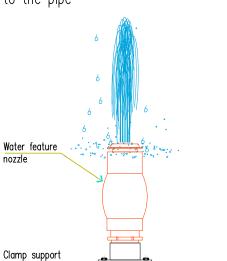


### STEP 2:

Fix the lamp to clamp support by bolt & nut

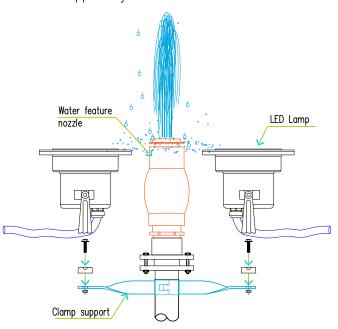

The lamp should be totally under water

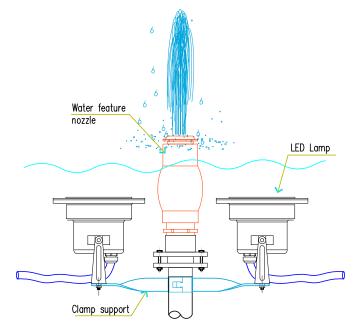





## Without hole LED light Installation method


3. Install to the ring spray

### STEP 1:

Fix the clamp support to the pipe

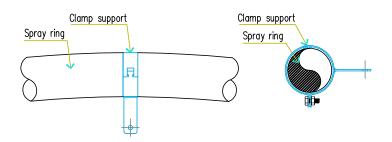

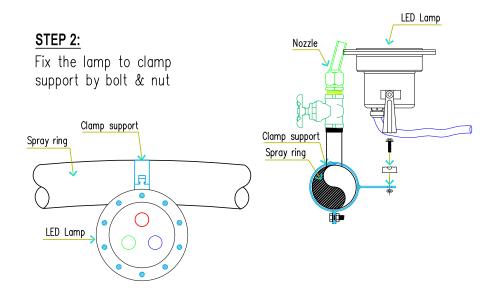

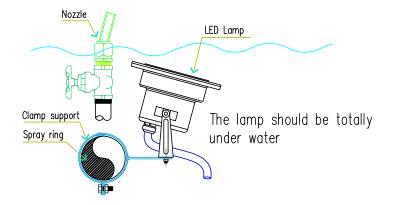




## With hole LED light Installation method

Install with nozzle

### STEP 1:

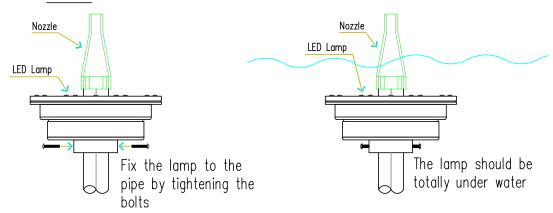

Note: This information is used for basic installation, please contact Viet Garden Company for more details. Hotline: 84 - (0) - 918 099 856; Email: info@densanvuon.com.vn